




a xylem brand



## Installation instructions

# VIS Set/EH

## Triangular suspension for UV/VIS sensors

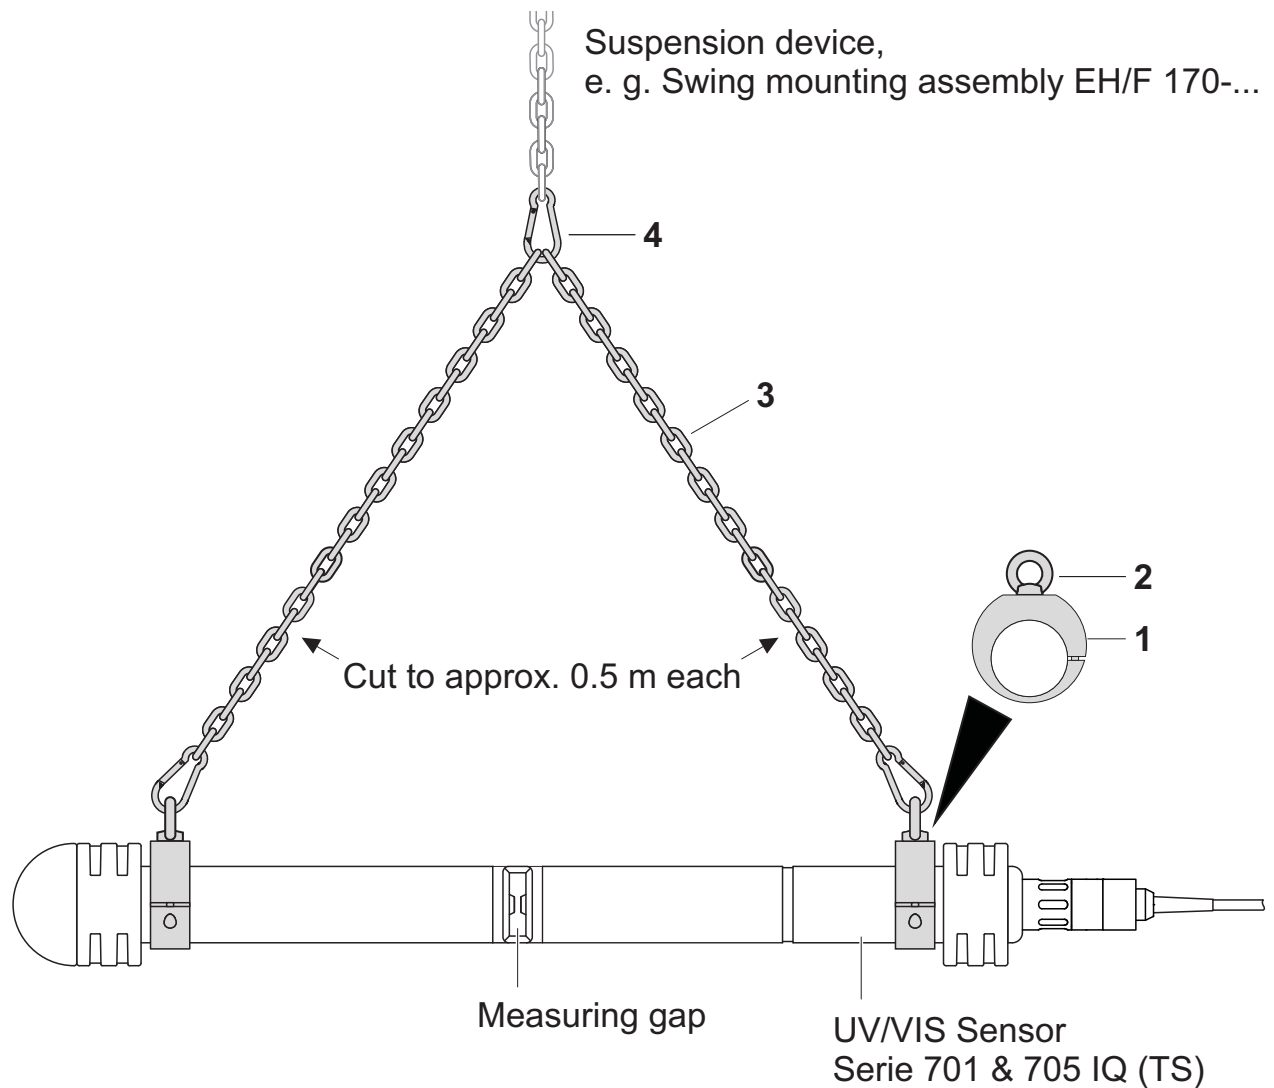

## Installation notes

Always install the sensor with the shock protection mounted.

Screw the eyebolt into the pipe holder finger-tight.

Make sure the measuring gap points sideways in the mounted position so that no air bubbles and foreign matter can collect in it.

## Technical data

Materials	Pos.	Designation	Material
	1	Pipe holder	POM
	2	Eyebolt	Stainless steel 1.4301 (V2A)
	3	Chain	PE
	4	Carabiner	Stainless steel 1.4571 (V4A)